




BURNSIDE

ASSEMBLY INSTRUCTIONS

D-FRAME - ADDON :: 292/299 - DF - ADD

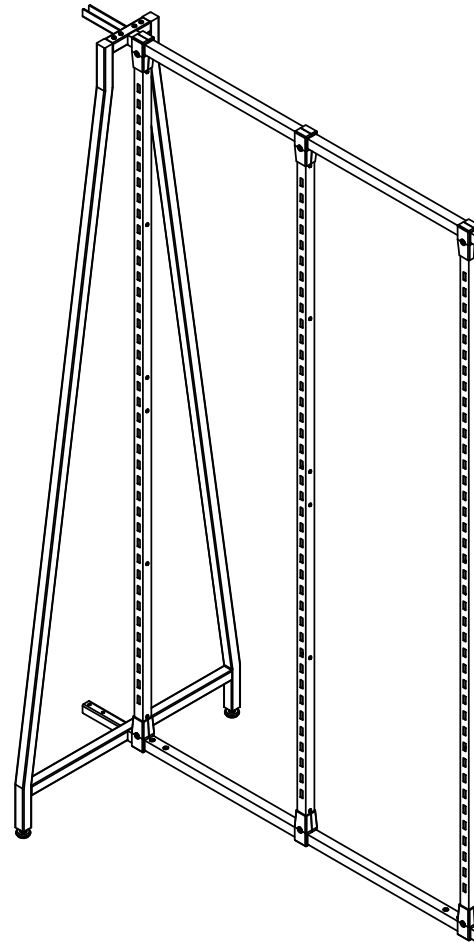

PART LIST:




2X. UPRIGHT
- END




2X. SIDE
UPRIGHT




1X. CENTER
UPRIGHT

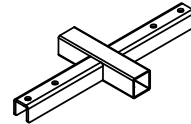


1X. TOP RAIL
- ADD

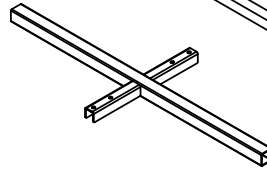


1X. BOTTOM RAIL
- ADD

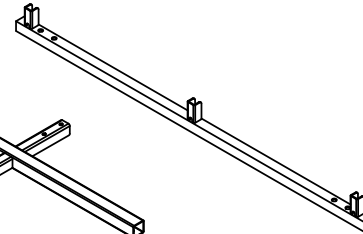


2X. RAIL

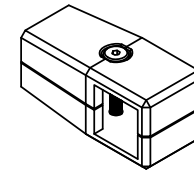


6X. CONNECTOR

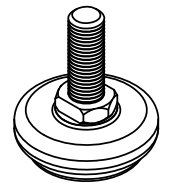


2X. 3/8"-16TPI LEVELER



8X.SBHC SCREW
1/4"-20 X 0.625"




8X. SOCKET
COUNTERSUNK
HEAD SCREW
1/4"-20 X 0.625"

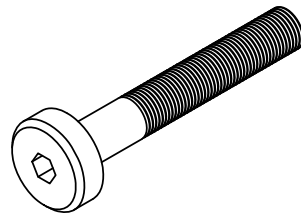


6X. JOINT CONNECTOR
BOLT 1/4"-20 X 1 5/8"




6X. HEX NUT
1/4"-20 TPI



24X.SBHC SCREW
#10-24 X 0.375"

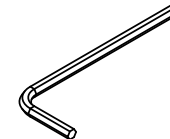


1X. L - KEY
FOR 1/4-20

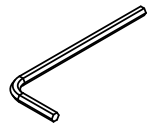


1X. L - KEY FOR
#10


STEP 1:

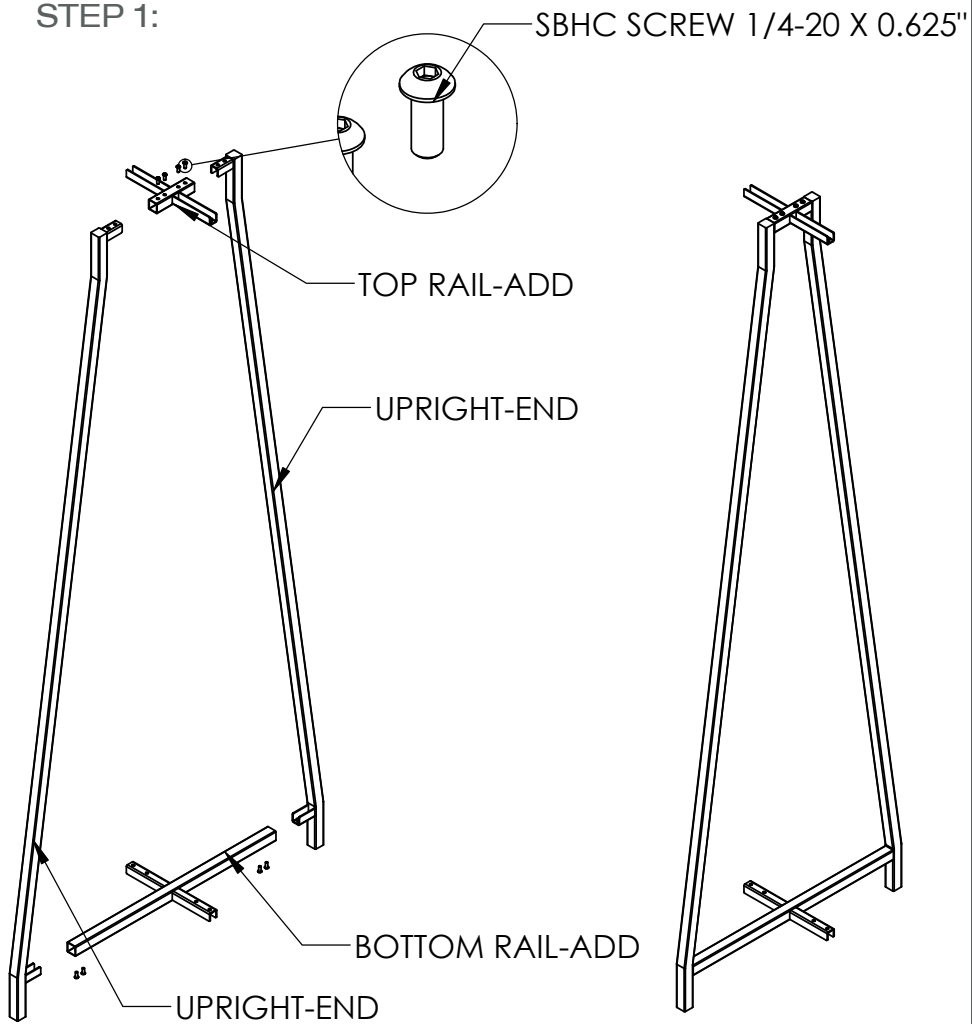

STEP 2:

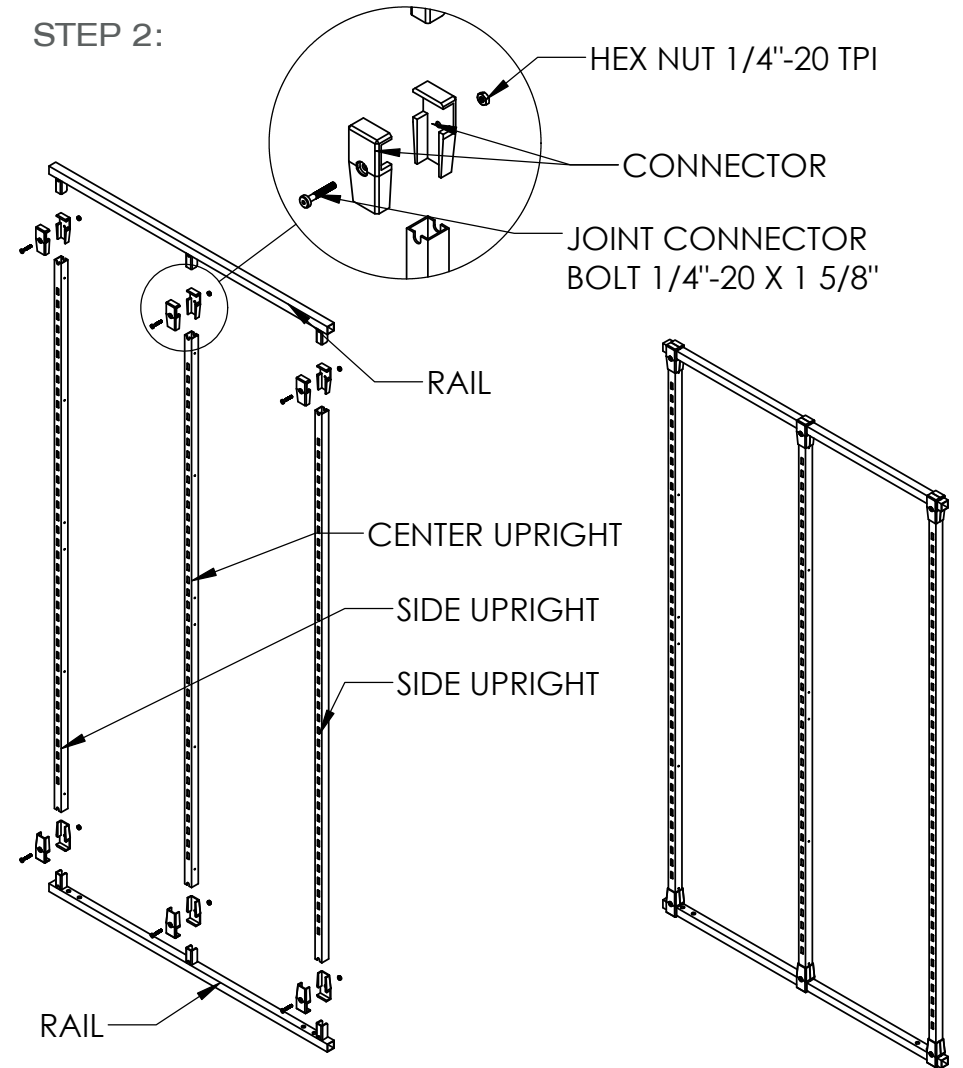

STEP 3:

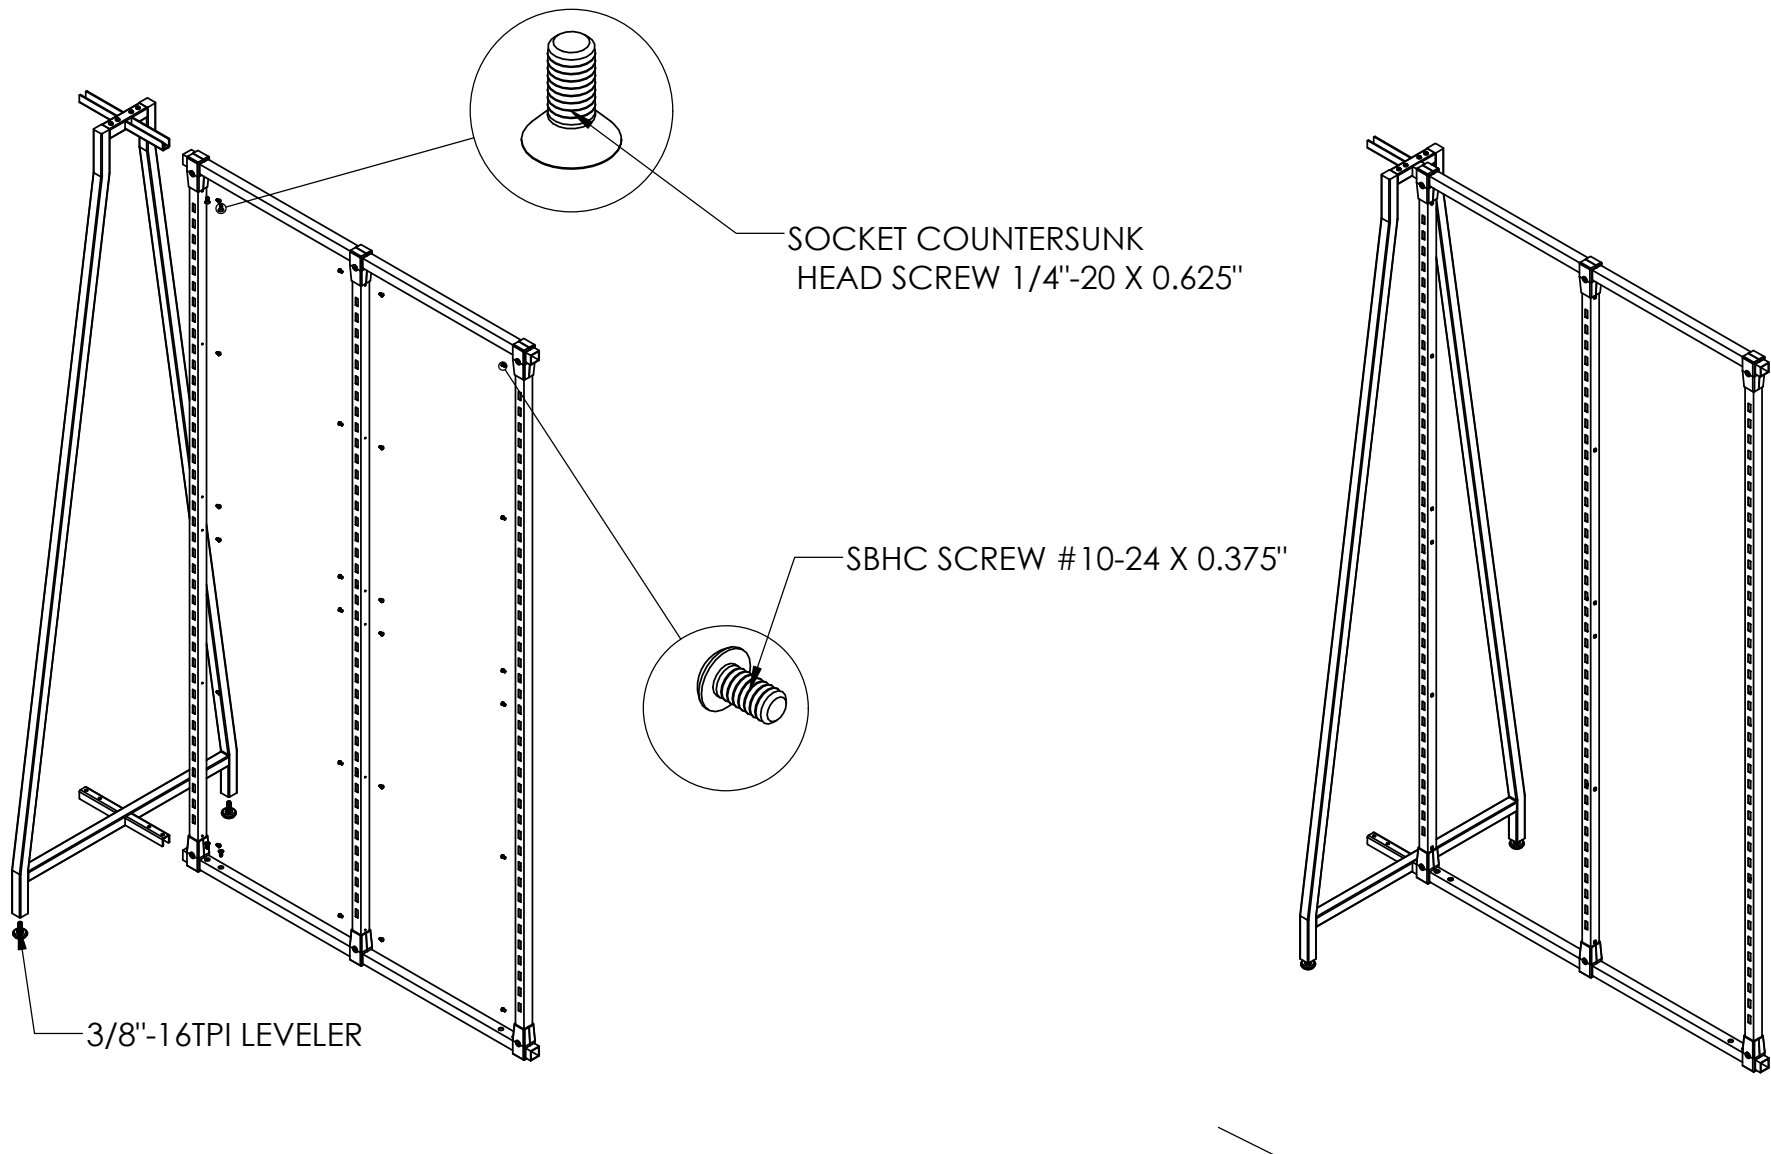

STEP 4:

