




BURNSIDE

ASSEMBLY INSTRUCTIONS

WALL UPRIGHT :: 292/299 - W - UPRIGHT



VERTICAL MOUNTED




HORIZONTAL MOUNTED


PART LIST:




1X. UPRIGHT W/ 12X. BOLTS

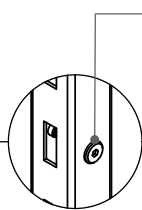

12X. ALLEN HEAD BOLT
#10-24 X 0.375"

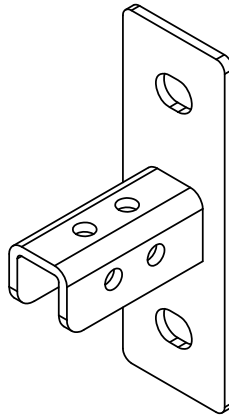


2X. WALL BRACKET

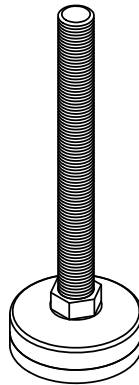


1X. LEVELER 3/8"-16 X 2.5"



4X. SBHC SCREW 1/4"-20 X 0.75"

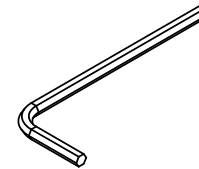


1X. L-KEY FOR #10-24UNC

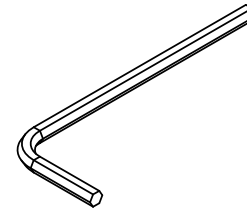

1X. L-KEY FOR 1/4"-20UNC

STEP 1:

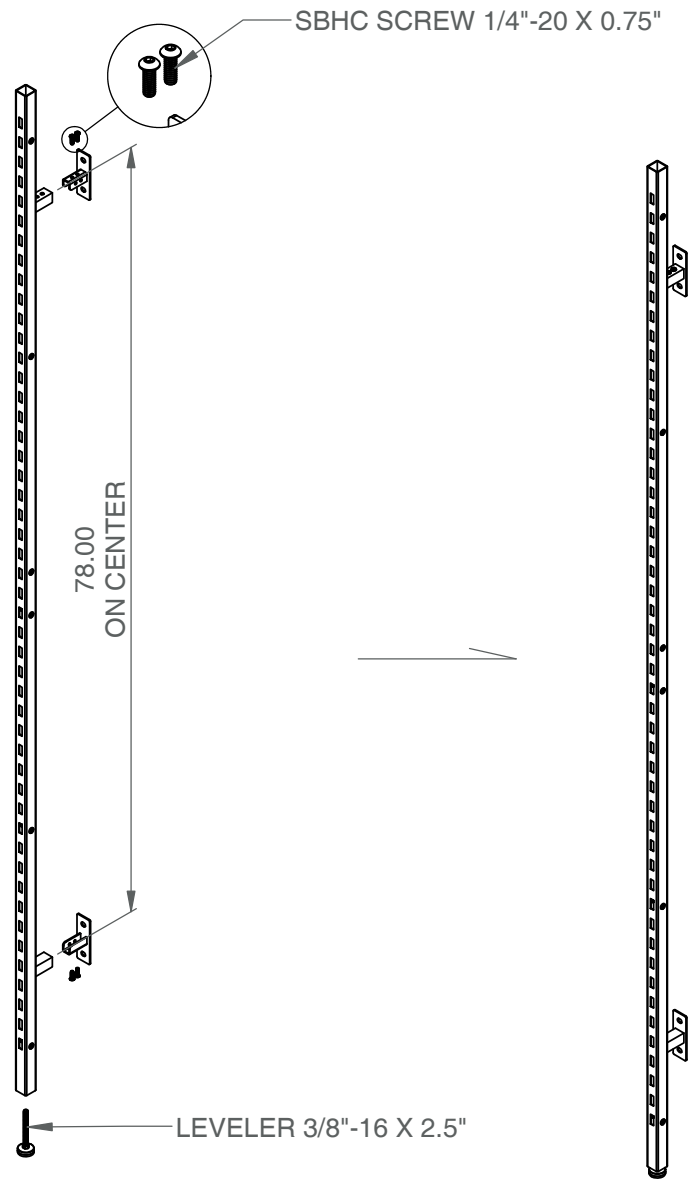

STEP 2:

